




- Multi stage nozzle ejector ensuring high vacuum of -94kPa(-27.8inHg).
- Large suction flow rate of Max. 1,110ℓ (39.2cfm)/min[ANR] with multi layer structure.



#### Characteristics

# Securing high vacuum and large flow rate

▶ By adoption of multi-stage nozzle and multi layer structure, suction flow can be secured approx. **2.2**times (on average) larger than air consumption.

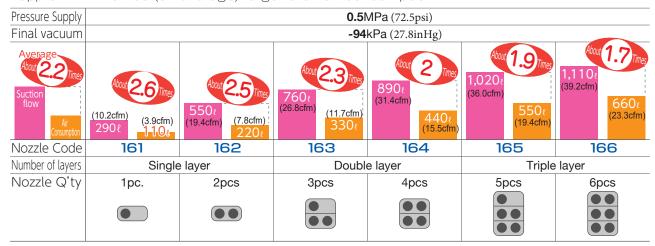

- Excellent in ozone resistance ▶ FKM for all sealing rubber.
- Silencer installing direction is selectable.
  - ▶ Selectable from **Three** directions; Side, Front(\*1) and With rotary joint, depending on the installation space.







- \*1. Front installation is only for single layer type: 161, 162.
- \*2. Vacuum characteristic changes by silencer Q'ty and its installing direction.
- Body can be fixed freely with two brackets.










# Suitable for applications in various industrial fields.

▶ Best suited for a various range of industries, as well as automobile, semiconductor, food and medicine industries.


# Suction Conveyance

Best suited for large and heavy or porous work-piece in automobile industry and packaging industry, etc.

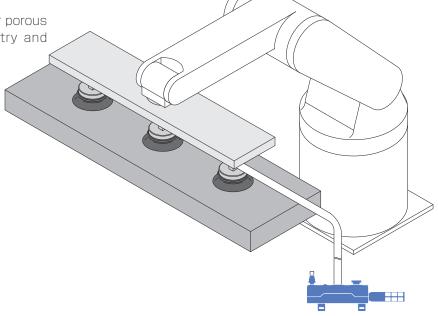


## Defoaming · Deaeration

Bubble and air contained in adhesive, cosmetics (cream) and distilled water can be removed.

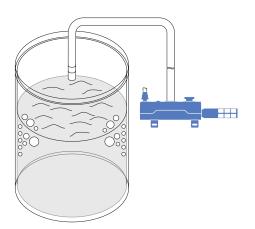

# Vacuum packing


Can be used for vacuum packing of food or the like, removing air from the package.

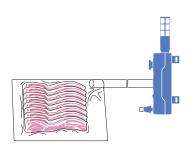

# Vacuum Chuck

The processing accuracy can be stabilized because the distortion and thermal deformation of the work-piece hardly occurs. Also, the work-piece can be fixed easily.

### Model Designation (Example)

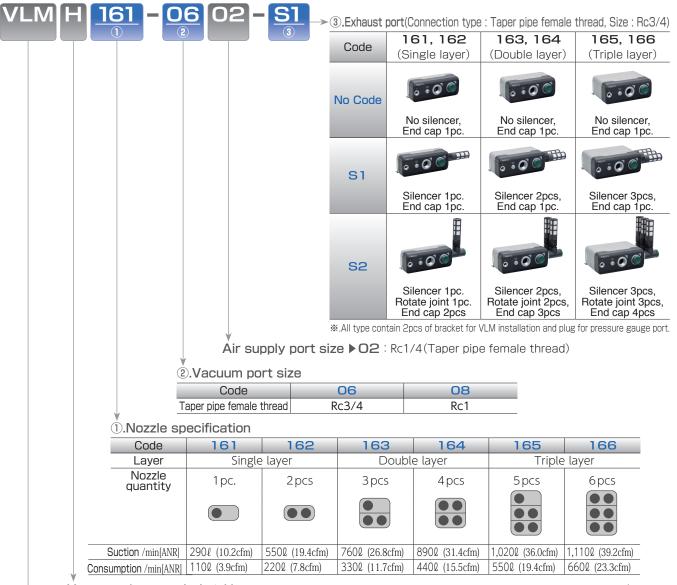

Vacuum characteristic ► H: High-vacuum large flow (Rated supply pressure: 0.5MPa, Final vacuum: -94kPa)

Large Flow Vacuum Generator VLM

### Model Designation of Attachment parts (Example)



\*.Dummy plug is needed to plug unnecessary nozzles.

Large Flow Vacuum Generator VLM



(For direct mounting to body or attaching to rotate joint)




(For connecting Push-in fitting (Thread size: R1/2) to vacuum port (Rc3/4))



#### **Specifications**

Nozzle type	161	162	163	164	165	166
Layers	Single	layer	Double	e layer	Triple	layer
Nozzle quantity	1 pc.	2 pcs	3 pcs	4 pcs	5 pcs	6 pcs
Suction flow rate (/min ANR)	290L (10.2cfm)	550L (19.4cfm)	760L (26.8cfm)	890L (31.4cfm)	1,020L(36.0cfm)	1,110L(39.2cfm)
Air consumption (/min ANR)	110L (3.9cfm)	220L (7.8cfm)	330L (11.7cfm)	440L (15.5cfm)	550L (19.4cfm)	660L (23.3cfm)
Fluid medium  Operating pressure range (MPa)  Rated supply pressure (MPa)  Air  0.3 ~ 0.7 (43.5~101.5psi)  0.5 (72.5psi)						
		<b>0.7</b> (43.5~10	1.5psi)			
Operating temp. range (°C)	5 ~ 50 (no freezing) (41~122°F)					
Nozzle diameter (mm) ø1.6						

#### Construction (VLMH163 or 164)

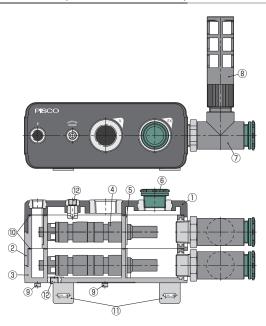

No.	Parts	Material	
1	Top case	Brass, PA, Aluminum	
2	Middle case	PA, Aluminum	
3	Bottom case	PA, Aluminum	
4	Nozzle Ass'y	PA, FKM	
(5)	Nozzle clip	Iron (Electroless nickel plated)	
6	End cap	PBT	
7	Rotate joint	Aluminum,PBT	
8	Silencer	PBT, PVF	
9	Hexagon socket head bolt	Iron (Electroless nickel plated)	
10	Case packing	FKM	
11)	Bracket	Iron (Electroless nickel plated)	
12	Plug for pressure gauge port	Iron (Electroless nickel plated)	

### Safety instruction manual


#### 

1. Maintenance of Large Flow Vacuum Generator VLM Series should be conducted by a person with the understanding about the construction of this product and enough knowledge about pneumatic equipment.

#### 

- 1. When selecting an exhaust piping, or use without silencer with dust existing in air or pipe, dust may enter from the exhaust port by back-flow at operation stop, and it may cause malfunction and performance drop.
- 2. Vacuum characteristics may be changed upon plumbing conditions and other variants.
- 3. Do not use the generator in corrosive gas, flammable gas, chemicals, sea water, water or steam. As the generator may be damaged and lead to leakage.
- 4. Do not use the generator in places where they can be exposed to water drops, oil drops, duct, etc. The generator is neither drip-proof nor dust-proof, so that trouble may result.
- 5. Diameter of tube connected to vacuum port to be as large as possible and length as long as possible, to ensure the generator performance.
- 6. Falling or shock may cause damage or leakage to the generator.
- 7. Install silencer to every layer of the generator, otherwise performance may be deteriorated.
- 8. Do not supply positive pressure more than 0.3MPa such as blow-off air to vacuum circuit. It causes check packing damage.
- 9. Use of vacuum filter is recommended to prevent possible entering of foreign substances from vacuum port (V).

### Characteristics

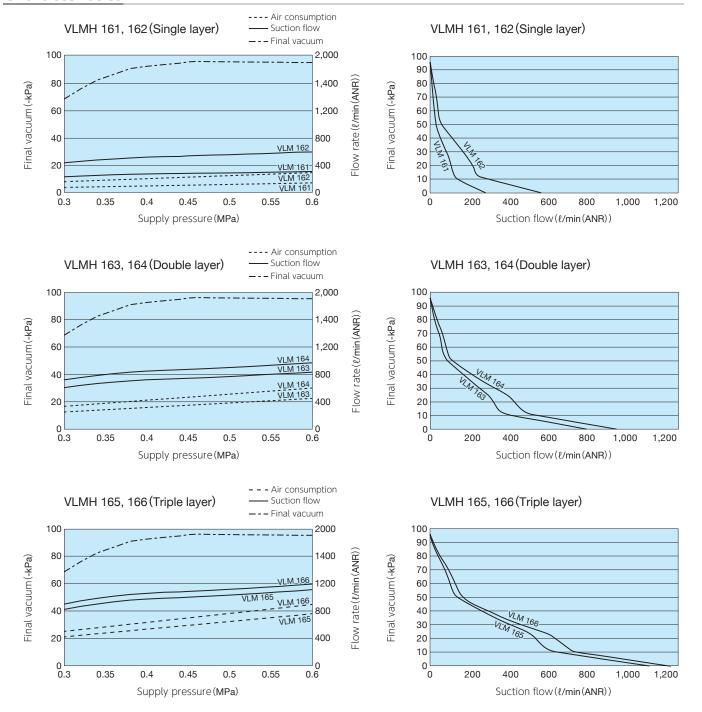



### Appearance drawing

Model code: VLM H161-202-3 VLM H162-202-3

### Single layer, nozzle 1pc. Single layer, nozzle 2pcs

No silencer ⇒3: No code




Silencer: Side installation ⇒3:S1





Silencer: Front installation ⇒3:S1




Unit: mm

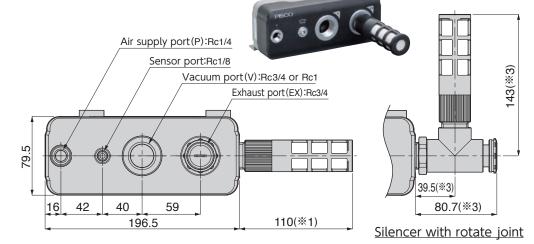

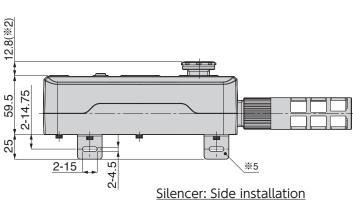

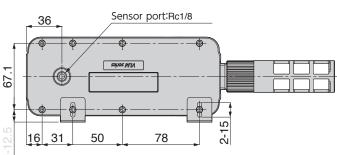

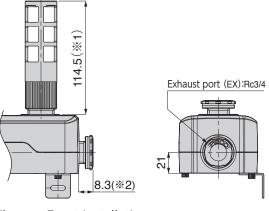

Silencer: Front installation

Model code	weight (g)
VLM H161-202	848
VLM H162-202	909
VLM H161-202-S1	882
VLM H162-202-S1	943
VLM H161-202-S2	952
VLM H162-202-S2	1,013

- %1)Reference dimension when silencer installed. %2) Reference dimension when end cap installed.
- \*3) Reference dimension when silencer and rotate joint installed.
- ※4) 2 Replaced with vacuum port size code from the model designation (example) in page 4.
- %5) The installation method of bracket in this dimensional drawing is only one example. Refer page 2 for other bracket installation method.

### Model code: VLM H163-202-3 VLM H164-202-3

## Double layer, nozzle 3pcs Double layer, nozzle 4pcs


No silencer ⇒3: No code








Unit: mm

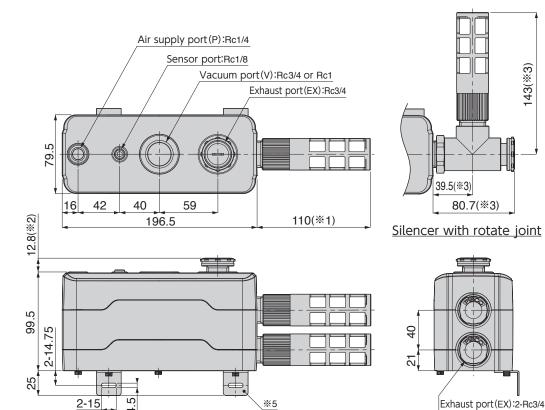

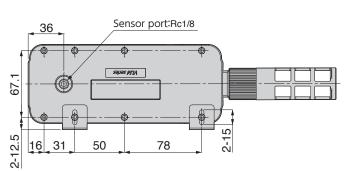

Model code	weight (g)
VLM H163-202	1,358
VLM H164-202	1,393
VLM H163-202-S1	1,426
VLM H164-202-S1	1,461
VLM H163-202-S2	1,566
VLM H164-202-S2	1,601

- \*1)Reference dimension when silencer installed. \*2) Reference dimension when end cap installed.
- \*3) Reference dimension when silencer and rotate joint installed.
- \*4) 2 Replaced with vacuum port size code from the model designation (example) in page 4.

Silencer: Side installation

%5) The installation method of bracket in this dimensional drawing is only one example. Refer page 2 for other bracket installation method.



Unit: mm

### Model code: VLM H165-202-3 VLM H166-202-3

### Triple layer, nozzle 5pcs Triple layer, nozzle 6pcs

No silencer ⇒3: No code







Air supply port(P):Rc1/4


Sensor port:Rc1/8

Vacuum port(V):Rc3/4 or Rc1


Exhaust port(EX):Rc3/4


16 42 40 59

196.5 110(※1)

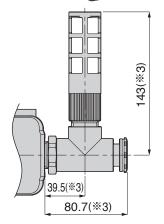

Silencer with rotate joint

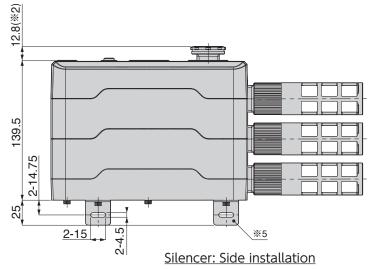

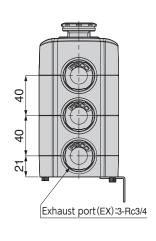


	Sensor port:Rc1/8
67.1	SHOS MIN
2-12.5	16 31 50 78

Model code	weight (g)
VLM H165-202	1,828
VLM H166-202	1,848
VLM H165-202-S1	1,930
VLM H166-202-S1	1,950
VLM H165-202-S2	2,140
VLM H166-202-S2	2,160

- %1)Reference dimension when silencer installed. %2) Reference dimension when end cap installed.
- ※3) Reference dimension when silencer and rotate joint installed.
- \*\*4) 2 Replaced with vacuum port size code from the model designation (example) in page 4.
- \*5) The installation method of bracket in this dimensional drawing is only one example. Refer page 2 for other bracket installation method.

#### Maintenance

- Follow below procedures for cleaning the nozzle and the diffuser
  - ①.Loosen all screws on the bottom of generator and remove top case and nozzle clip.
  - ②.Remove diffuser from the generator body.
  - ③.Remove nozzle 3 and nozzle 1 & 2 ass'y in this order. ( Do not disassemble nozzle 1 & 2 ass'y.)
  - (4) Remove deposits by air blow or wiping with soft cloth from the diffuser, nozzle, packing and seal.
  - ⑤. Assemble the body with the nozzle 1 &2, nozzle 3 and the diffuser in reverse order of disassembling and install the nozzle clip. Fasten the screws with the tightening torque 1N·m~1.2N·m. Make sure the packing is in the proper position.

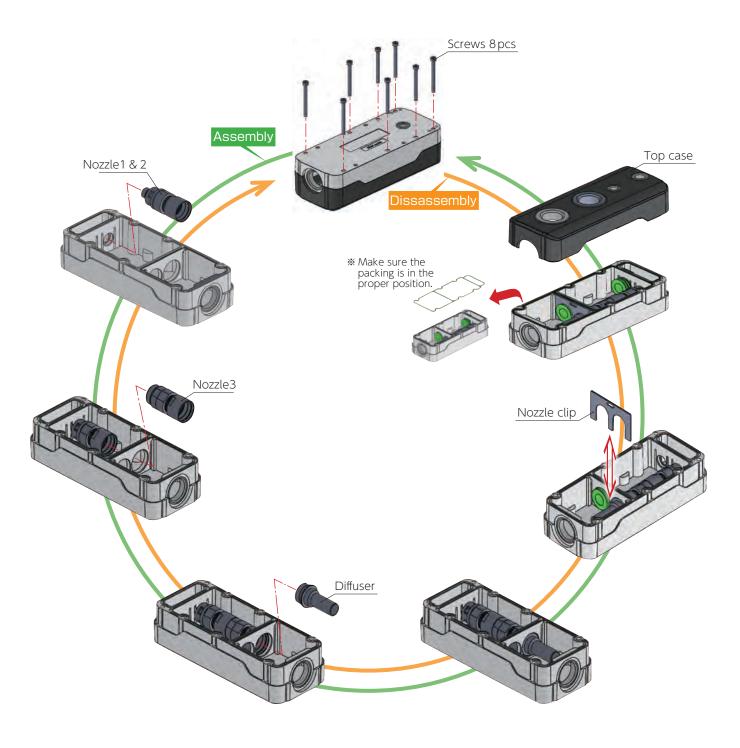



#### **Parts**



| Model code |
|------------|------------|------------|------------|------------|------------|
| VLM-B      | VLM-R      | VLM-E      | VLM-D      | VVVSR06    | PF06-04    |

#### Related products

#### Push-in fittings for air supply port

\* Air supply port size : Rc1/4.



Model code PCøD-R	Model code PLøD-R
PC10-02	PL10-02
PC12-02	PL12-02

#### Push-in fittings for vacuum port

\* These push-in fittings can be used only when the vacuum port size is Rc3/4 and installing a bush listed above (PF06-04).



Model code PCøD-R	Model code PLøD-R	Model code PXøD-R
PC10-04	PL10-04	PX10-04
PC12-04	PL12-04	PX12-04
PC16-04	PL16-04	PX16-04

#### Large digital pressure sensor (vacuum switch)

VUS-32 Compound pressure type ■ Rated pressure range:-100~100kPa



# Model code VUS-32R-NV-01

VUS-32R-N2-01 VUS-32R-PV-01

VUS-32R-P2-01


- Easily viewable LCD dual displays. High level visibility with 3-color display
- Copy function enables to copy various settings to slave-side sensor.

#### Digital pressure gauge

GPD-V Negative pressure type

■ Rated pressure range:-101~0kPa



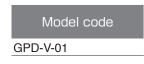

- Improved wiring workability and maintenance by lead wire with connector.
- Pressure is clearly digital displayed by a single push of a button.
- Display with only 1 battery, no need of wiring.
- A power saving mode is adapted. Battery life is about 3 years (at 5times indication/day).

#### Air Tank

ATS



■ Tank capacity: 0.4 ~20ℓ

Model code
ATS-0.4
ATS-0.75
ATS-2
ATS-5
ATS-10
ATS-20

- Reducing the vacuum pressure fluctuations and pulsations.
- Tank capacity is selectable from 6 variations.
- Tank is made of stainless steel.
- In For more detail information on those products, please check our web site (http://en.pisco.co.jp/).



